



DriMaster HiFlo Upholstery Tool Owner's Manual

Model 000-163-613

U.S. Products
11015 47th Avenue West, Mukilteo, Washington 98275

MAN-44317 Rev. 0, March 26, 2011
(182-881)

No part of this manual may be reproduced or used in any form or by any means (i.e. graphic, electronic, photocopying or electronic retrieval systems) without the express written permission of U.S. Products.
All rights reserved. © 2011 U.S. Products.

Table of Contents

GENERAL INFORMATION.....	SECTION 1
Contact Information.....	1-2
Warnings, Cautions and Notices.....	1-3
OPERATING INSTRUCTIONS.....	SECTION 2
Optional Accessory Handle Assembly.....	2-1
Begin Cleaning.....	2-2
TOOL MAINTENANCE.....	SECTION 3
Removing and Re-installing the Clear Window Cover	3-1
Cleaning the Solution Bar Jet.....	3-2
Cleaning the Filter Cartridge and Orifice Plate.....	3-3
ASSEMBLIES AND PARTS LISTS.....	SECTION 4
Handpiece Assembly Parts List.....	4-3
Accessory Handle Assembly Parts List.....	4-4
Hide-A-Hose Assembly Parts List	4-7
HOW TO ORDER PARTS	SECTION 5
WARRANTY INFORMATION	SECTION 6

List of Figures

Figure 1-1. DriMaster HiFlo Upholstery Tool	1-1
Figure 1-2. Optional Accessory Handle Attached to Tool	1-1
Figure 2-1. Remove Tool Screws	2-1
Figure 2-2. Attach Accessory Handle	2-1
Figure 2-3. Attach Solution Hose and Adjust Water Volume	2-2
Figure 2-4. Turning Knob to “HiFlo” Position Forms Sheet of Water Across Bar Jet.....	2-3
Figure 3-1. Remove Vacuum Hose Cuff.....	3-1
Figure 3-2. Remove Knob	3-1
Figure 3-3. Remove Screws.....	3-1
Figure 3-4. Separate Cover Halves.....	3-1
Figure 3-5. Slide Cover and Half of Tool Body	3-2
Figure 3-6. Clean Debris from Opening.....	3-2
Figure 3-7. Disassemble Solution Quick Connect.....	3-3
Figure 3-8. Remove Filter Cartridge and Plate Orifice	3-3
Figure 3-9. Re-assemble Solution Quick Connect	3-3
Figure 4-1. Handpiece Assembly.....	4-2
Figure 4-2. Accessory Handle Assembly	4-4
Figure 4-3. Hide-A-Hose Assembly - Parts View 1 of 2.....	4-5
Figure 4-4. Hide-A-Hose Assembly - Parts View 2 of 2.....	4-6

1 - General Information

Congratulations on purchasing the very latest in upholstery cleaning technology.

The patented DriMaster HiFlo Upholstery Tool, shown in Figure 1-1, is perfect for cleaning upholstery, fabric and stairs. Because of its Jetless Cleaning Technology, it has no trigger valve, no spray jet and never needs a separate dry pass.*

The tool's new design incorporates light weight, extremely durable materials, giving the tool increased levels of strength and comfort.

The DriMaster HiFlo Upholstery Tool accommodates high volume jobs where production rate is important.

It is capable of solution flow rates for jobs that require a flushing action which makes the tool particularly efficient for stair cleaning.



Figure 1-1. DriMaster HiFlo Upholstery Tool

An optional accessory handle, shown attached to the tool in Figure 1-2, is available to increase comfort on long cleaning jobs.

We trust that you will enjoy many years of reliable upholstery cleaning with the DriMaster HiFlo Upholstery Tool.

NOTICE

The DriMaster HiFlo Upholstery Tool can be used with a variety of truckmount cleaning systems.



Figure 1-2. Optional Accessory Handle Attached to Tool

* U.S. Patent No. 6,243,914; 7,070,662; RE39,623; D590,111
New Zealand Patent No. 549645
Other U.S. and Foreign Patents Pending



CONTACT INFORMATION

If you have any questions regarding the operation, maintenance or repair of this machine, refer to the following information and contact the appropriate U.S. Products department.

<u>Hours</u>	<u>Telephone Numbers</u>	<u>E-mail Addresses</u>
Monday-Friday	(425) 775-7275 Support	Tech Support: techsupport@usproducts.com
7:00 a.m. to 5:00 p.m.	(425) 775-7276 Parts	Parts Support: csorders@usproducts.com
Pacific Time	FAX (425) 771-7156 - Parts (800) 426-4225 - Support	

When calling or contacting us, be sure to reference the serial number and date of purchase.

FOR YOUR REFERENCE:

Serial No. _____

Date of Purchase: _____

WARNINGS, CAUTIONS AND NOTICES

WARNING

U.S. Products uses this WARNING symbol throughout the manual to warn of possible injury or death.

CAUTION

This CAUTION symbol is used to warn of possible equipment damage.

NOTICE

This NOTICE symbol indicates that federal or state regulatory laws may apply, and also emphasizes supplemental information.



2 - Operating Instructions

Your DriMaster HiFlo Upholstery Tool has been engineered using the latest and most sophisticated technology available to produce the finest upholstery cleaning results possible. Despite this, it remains only a tool of the upholstery cleaning trade and can produce only as good a job as the person operating it.

U.S. Products strongly recommends attending an Institute of Inspection, Cleaning and Restoration Certification (IICRC) approved Upholstery Cleaning course as soon as possible and to always follow the IICRC guidelines when cleaning.

OPTIONAL ACCESSORY HANDLE ASSEMBLY

The DriMaster HiFlo Upholstery Tool can be equipped with an optional accessory handle (purchased separately) to increase comfort and control during difficult or extended repetitious use of the upholstery tool.

1. Remove the two screws, nuts, and washers found on the handle grip portion of the tool (Figure 2-1). These parts will be reused in fastening the handle.



Figure 2-1. Remove Tool Screws

2. Attach the accessory handle as shown in Figure 2-2. The original shorter screws, nuts, and washers are used on the upper handle. The longer supplied screws, nuts and washers are used to connect the handle to the tool body.



Figure 2-2. Attach Accessory Handle

BEGIN CLEANING

⚠ WARNING

Do not use the DriMaster HiFlo Upholstery Tool on a machine exceeding 14" Hg vacuum and 500 psi solution pressure. Personal injury could result.

1. Attach the solution hose to the solution quick connect. A 1 ½" - 2" vacuum hose can be attached to the vac hose manifold (see Figure 2-3).

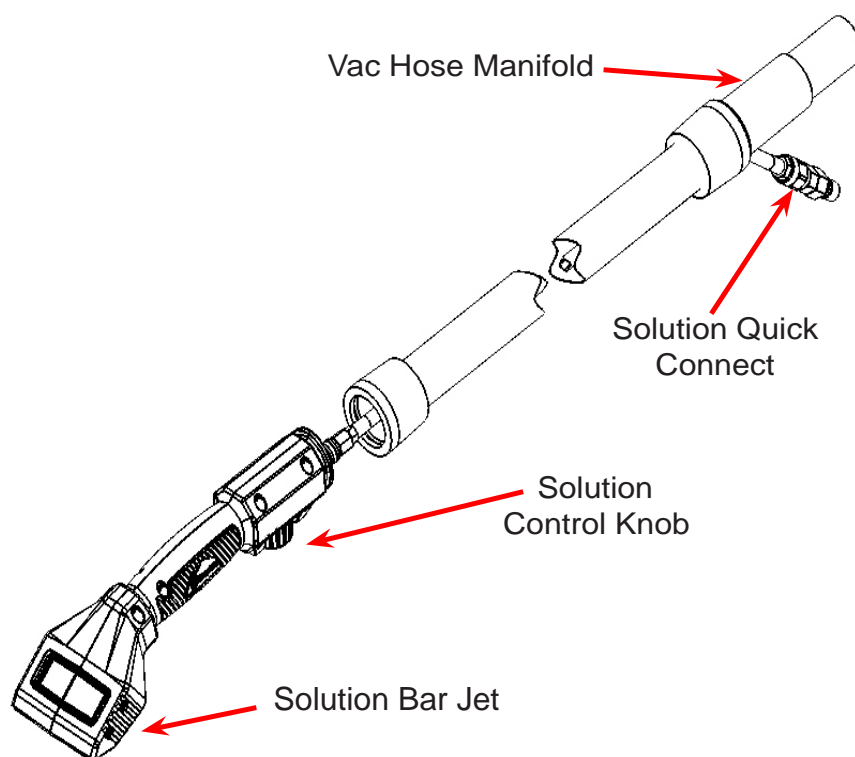


Figure 2-3. Attach Solution Hose and Adjust Water Volume

2. Adjust the water volume by turning the solution control knob. Turning the knob counterclockwise increase the water volume; turning the knob clockwise decreases the water volume. The amount of water volume you need will vary with the type of machine you are cleaning with and the type of material you are cleaning.
3. To begin adjustment, make sure the cleaning machine is running and both vacuum and solution hoses are connected.
4. Slowly open the solution control knob until water is flowing across the entire bar jet (without overspray).

When the solution knob is turned toward the “HiFlo” position, the water will form a sheet across the solution bar jet (see Figure 2-4)

NOTICE

The amount of vacuum and pressure produced by your machine will determine the overspray on the solution bar jet. The patented solution bar jet makes a trigger valve unnecessary.

⚠ WARNING

Do not touch the solution bar jet during operation or immediately afterward; doing so may cause severe burns!

CAUTION

When cleaning stairs, do not allow the tool to come into contact with the tack strip along the edges of the stairs. The tool’s cleaning surface will be damaged by the tack strip. Equipment damage such as this is not covered by warranty.

NOTICE

It may be necessary to periodically clean the inside of the tool, hose and manifold. Debris can build up over time, restricting the vacuum flow (see Figure 3-6).



Figure 2-4. Turning Knob to “HiFlo” Position Forms Sheet of Water Across Bar Jet



3 - Tool Maintenance

REMOVING AND RE-INSTALLING THE CLEAR WINDOW COVER

1. Remove vacuum hose cuff from DriMaster HiFlo Upholstery Tool and disconnect the solution hose quick connect as shown in Figure 3-1.

NOTICE

Lightly heating the “cuff” with a heat gun will make the cuff easier to remove and install.

2. Remove the solution control knob by removing the 8/32” Allen head screw as shown in Figure 3-2.
3. Loosen, but do not remove, the valve retention nut (see arrow in Figure 3-3).
4. Remove all screws from both sides of the tool (see Figure 3-3) and carefully separate the tool halves (see Figure 3-4).
5. Slide the clear window cover off of the tool body.



Figure 3-1. Remove Vacuum Hose Cuff



Figure 3-2. Remove Knob



Figure 3-3. Remove Screws



Figure 3-4. Separate Cover Halves

6. To re-install the clear window cover, slide it into one half of the tool body (see Figure 3-5). Then slide the other half of the body into the window.

The clear window has grooves on either side that slide onto the edges of the cutouts in the tool bodies.

NOTICE

The wear plates must be aligned and slid onto the tool half at the same time as the cover.



Figure 3-5. Slide Cover and Half of Tool Body

CAUTION

The window cover may come out if not installed properly.

7. Continue to assemble the two halves of the tool together, with the clear window being captured in the cutouts. Careful attention must be paid when sliding the two body halves together.
8. Re-install the screws.
9. Tighten the valve retention nut. Do not overtighten.

CLEANING THE SOLUTION BAR JET

The solution bar jet needs to be cleaned with a .020" feeler gauge.

1. Slide the feeler gauge into the small slot.
2. Gently slide the gauge back and forth to clear any debris from the opening (see Figure 3-6).



Figure 3-6. Clean Debris from Opening

CAUTION

Use only a feeler gauge to clean the slot in the bar jet. Use of any other implement (paper clip, knife blade) may damage the opening and seriously reduce the cleaning effectiveness of the upholstery tool.

NOTICE

U.S. Products recommends you clean the filter cartridge and orifice plate on a periodic basis to eliminate hard water deposit buildup. Both components are conveniently located in the solution quick connect subassembly.

Disassemble the solution quick connect to gain access to the filter cartridge and orifice plate (see Figure 3-7 and Figure 3-8).

CLEANING THE FILTER CARTRIDGE AND ORIFICE PLATE

1. Remove the filter cartridge and orifice plate, place them in a cup full of white vinegar and soak for 30 minutes.
2. Clean the orifice plate's opening with a wooden skewer or similar tool such as a plastic pick.

CAUTION

Do not use a metal object to clean the opening of the orifice plate; doing so can damage the plate.

3. Remove both parts from the vinegar and thoroughly rinse them with clear water.
4. Re-assemble the solution quick connect, re-installing the filter cartridge and orifice plate in the proper order (see arrows in Figure 3-9).

CAUTION

Do not operate the DriMaster HiFlo Upholstery Tool without the orifice plate. If you do not properly re-install the orifice plate in the solution quick connect (see Figure 3-9), equipment damage could result. Such equipment damage is not covered by warranty.



Figure 3-7. Disassemble Solution Quick Connect

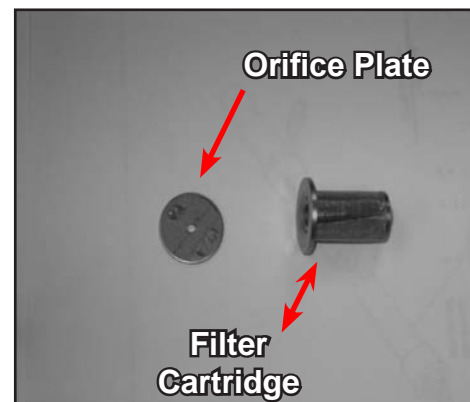


Figure 3-8. Remove Filter Cartridge and Plate Orifice

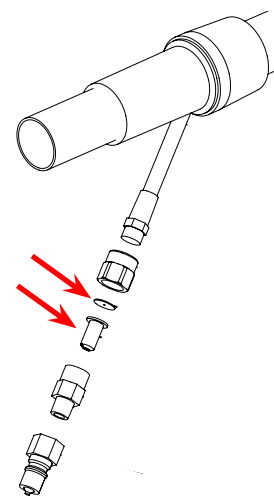


Figure 3-9. Re-assemble Solution Quick Connect



4 - Assemblies and Parts Lists


This section contains all the assemblies and parts lists associated with the upholstery tool:

- Handpiece Assembly Parts List
- Accessory Handle Assembly Parts List
- Hide-A-Hose Assembly Parts List

Handpiece Assembly Parts List

Item	Part Number	Description	Qty
1	000-076-088	Jet, DriMaster S.S. Hiflo Bar Assembly - Formed	1
2	000-105-533	Plate, Wear - DriMaster Hiflo	2
3	000-061-138	Handle, Handpiece, Left, DriMaster Hiflo	1
4	000-169-014	Valve, Ball	1
5	000-052-762	1/8" NPT X 1.5	1
6	000-052-433	Quick Disconnect, Male 1/8" NPT	1
7	000-061-139	Handle, Handpiece, Right, DriMaster Hiflo	1
8	000-174-168	Washer, Flat, .875 O.D. X .515 I.D X .035 Thk	1
9	000-174-167	Washer, Flat, .248 O.D. X .128 I.D. X .029 Thk	12
10	000-094-063	Nut, #6-32UNC Nylock	8
11	000-041-445	Cover, DriMaster Hiflo Window	1
12	000-052-541	1/8" NPT X .1875 O.D.	1
13	000-061-146	Assembly, Knob Custom Insert with Label	1
14	000-143-576	Capscrew, Socket Head, 6-32 X 5/16	4
15	000-143-577	Capscrew, Socket Head, 6-32 X 3/4	2
16	000-143-578	Capscrew, Socket Head, 6-32 X 7/8	6
17	000-068-667	Hose, Hide-A-Hose Assembly	1

Figure 4-2. Accessory Handle Assembly
6958 Rev. B

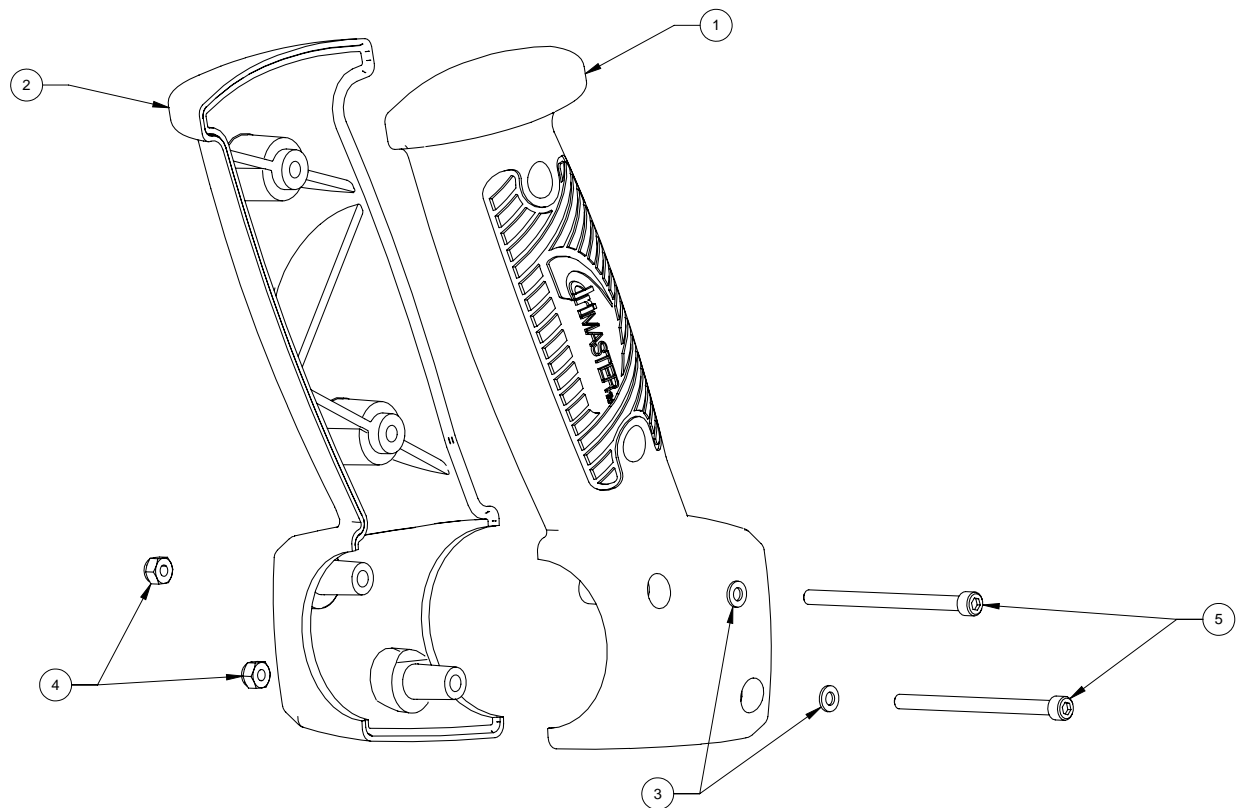

Accessory Handle Assembly Parts List

Item	Part Number	Description	Qty
1	000-061-142	Handle, Accessory, Right	1
2	000-061-141	Handle, Accessory, Left	1
3	000-174-167	Washer, Flat, .248 O.D. X .128 I.D. X .029 Thk	2
4	000-094-063	Nut, #6-32UNC Nylock	2
5	000-143-579	Cap Screw, Socket Head, #6-32 X 2	2

Figure 4-3. Hide-A-Hose Assembly - Parts View 1 of 2
6959 Rev. D


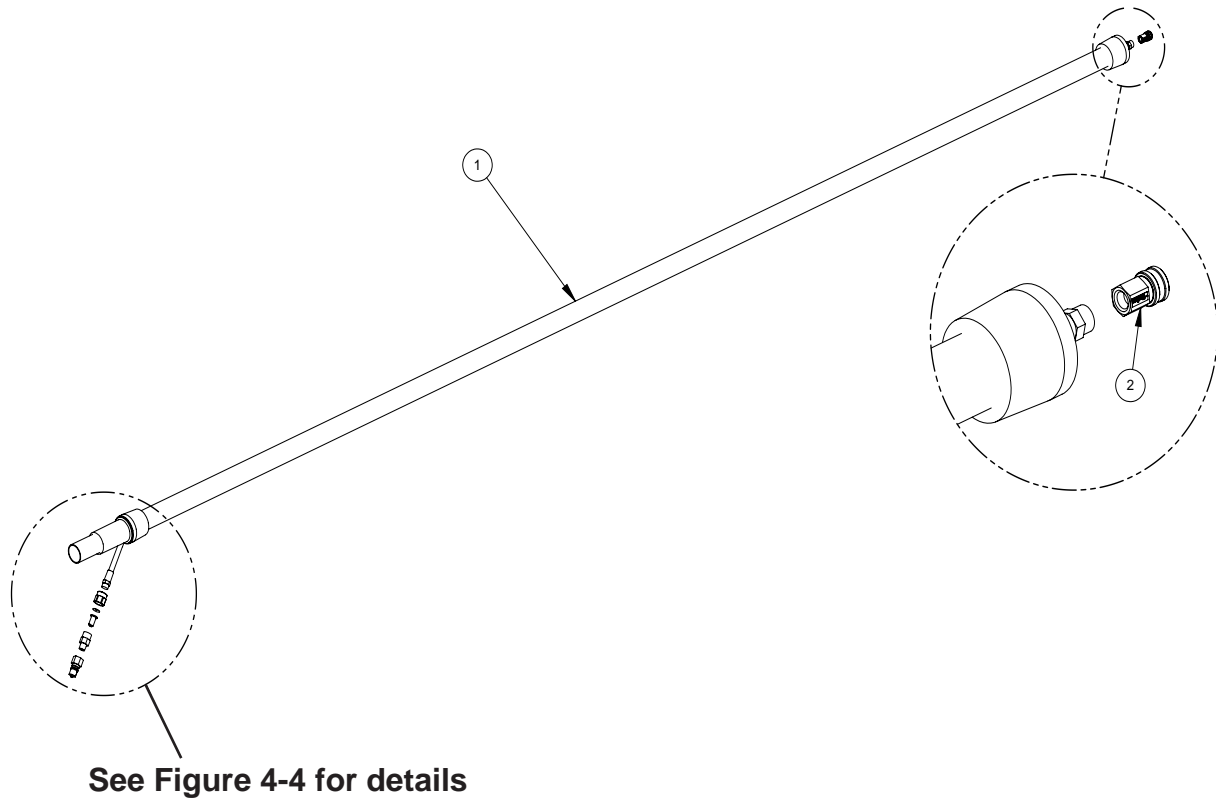


Figure 4-4. Hide-A-Hose Assembly - Parts View 2 of 2
6959 Rev. D



Hide-A-Hose Assembly Parts List

Item	Part Number	Description	Qty
1	- - -	Hide-A-Hose Raw	1
2	000-052-434	Quick Connect, Female, 1/8" - Open	1
3	000-049-052	Filter Cartridge, 1/4" Brass	1
4	000-180-023	Orifice, Plate 0.045"	1
5	000-094-118	Nut, Brass Jet X 1/4" FNPT	1
6	000-052-050	Quick Connect, 440 Male W/ Viton Std	1
7	000-052-171	Housing, 1/4" Brass Filter	1

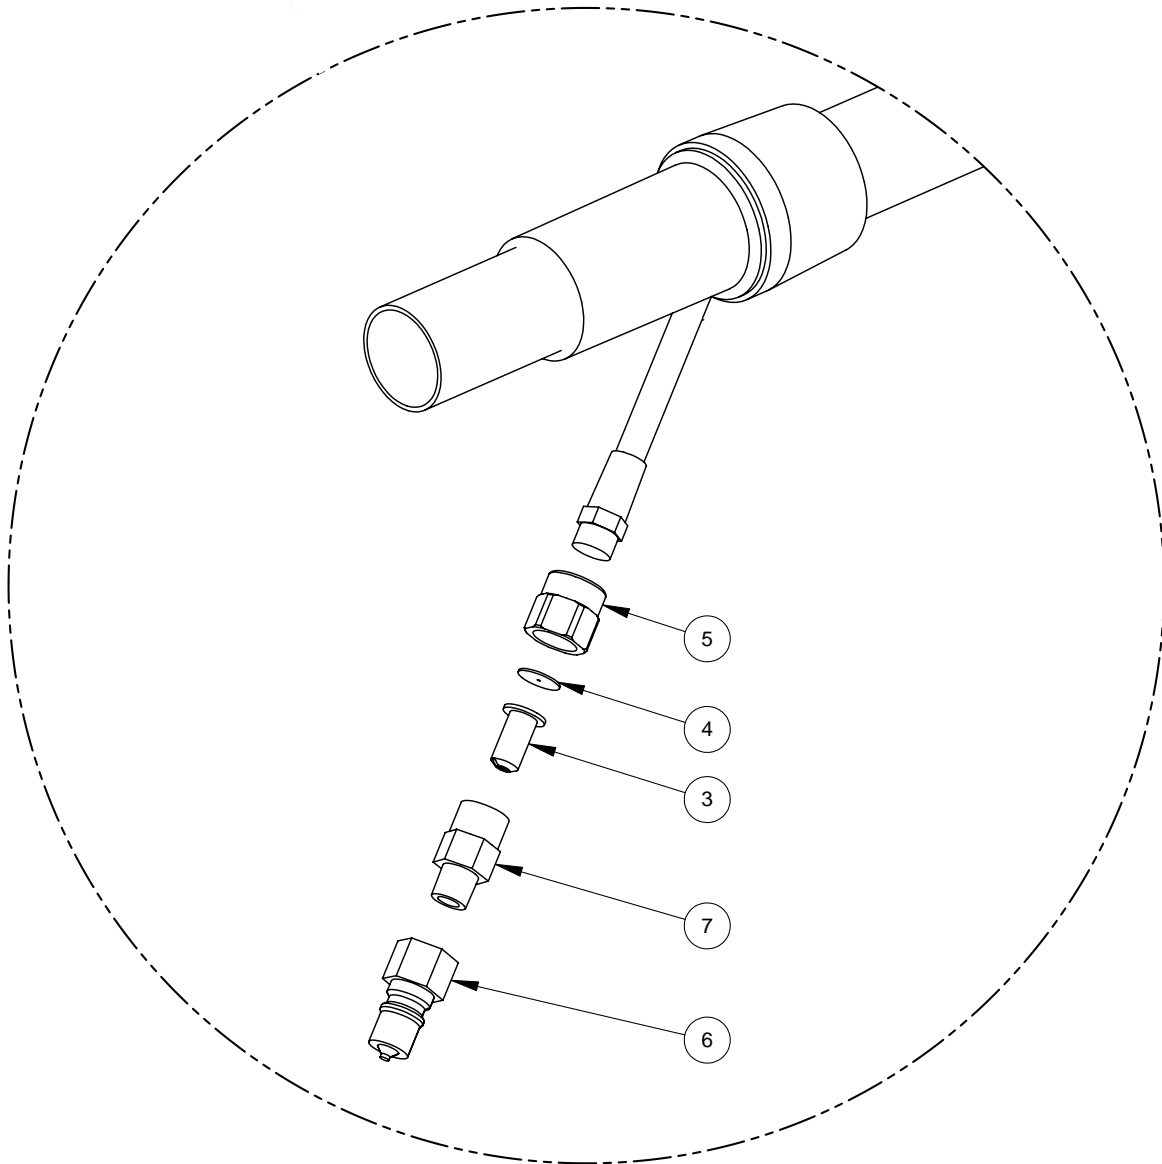

5 - How to Order Parts

From time to time, cleaning equipment may wear or malfunction. To obtain a proper diagnosis of your malfunction, and to order warranty replacement parts or arrange for repairs, it is important that you proceed in the following manner:

1. Call U.S. Products Service Department.
2. Have the following information ready:
 - a. Equipment Model
 - b. Date of Purchase
 - c. Description of Malfunction
3. Once it has been determined which parts are needed to correct the problem, make arrangements to either have repairs performed or have parts shipped to you.

U.S. Products warranty covers only defective materials and/or workmanship for the periods listed. **Labor and/or diagnostic reimbursement is specifically excluded.**



6 - Warranty Information

All parts of the DriMaster HiFlo Upholstery Tool are warranted against defects for one year.

Freezing, hard water, the use of unapproved solvents and/or abuse will void the warranty.

U.S. Products warranty covers only defective materials and/or workmanship for the period listed. **Labor and/or diagnostic reimbursement is specifically excluded.**

